

Owner's
카스 체중계

사용설명서

제품 구성

체중계, 건전지, 사용설명서 (풀질보증서)

체중계 사용

모델명	HE-14/15/20	HE-16/17/18/19	HE-21	HE-24/25
최대표시	180kg	150kg	180kg	150kg
1kg의 값	100g	100g	100g	100g
유리두께	8mm	6mm	6mm	6mm
LCD크기	55mm	30mm	55mm	42mm
백라이트	X	X	0	0
건전지	3V CR2032 1개	1.5V AAA 2개		
공통사양	AUTO ON 센서 장착 전원 차단 OFF 절전기능 자동 영점재현 기능 사용방법 초과 Err 표시 건전지 교체시기 Lo 표시			

OPERATION

- Put the scale on a flat and solid surface.
Avoid carpet or soft surface.

체중계 사용방법	전원 On	체중 표시	전원 Off
체중계 뒷면에 건전지 케이스를 열고 건전지가 삽입되어 있는지 확인하십시오.	체중 표시	58.5	10초후
체중계를 평평하고 견고한 바닥 위에 놓고 부드럽게 올리셔십시오.	체중 표시	58.5	내려 올
잠시 기다리시면, 다음과 같이 체중계에 정확한 무게가 표시됩니다.	체중 표시	58.5	내려 올
체중계에서 내려 오시면 자동으로 전원이 깨지게 됩니다.	체중 표시	58.5	내려 올

체중계 건전지 교환방법

- 건전지 교환 시기가 되면 표시부에 **Lo** 표시가 됩니다.
* 중력 값에 의한 오차범위 = $\pm 500g$
* 표시가 나오면 전원이 깨진 후 다시 한번 측정하세요.
- 체중계 뒷면에 건전지 케이스를 열고 건전지를 교체해 주세요.

체중계 건전지 교환방법


- 건전지 교환 시기가 되면 표시부에 **Lo** 표시가 됩니다.
- 체중계 뒷면에 건전지 케이스를 열고 건전지를 교체해 주세요.



가정용 디지털 체중계
Digital Personal Scale

제품 사용설명서

Model : HE-14/15/16/17/18/19/20/21/24/25

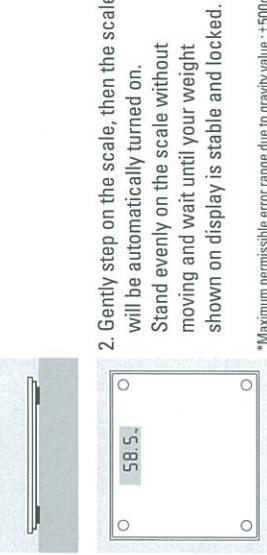

AUTOMATIC SWITCH OFF

- When you step off the scale, it will automatically switch off.
- Auto shut-off occurs if display shows 0.0 or shows the same weight reading for approximate 10 seconds.
- Ensure +/- terminals are correct way around.
- Use proper tool to help release the battery from the compartment if necessary.
- Please remove the insulating strip before use.



TO CHANGE BATTERY